




FIFE CORPORATION  
Post Office Box 26508  
Oklahoma City, Oklahoma 73126, U.S.A.  
Phone: (405) 755-1600 Fax: (405) 755-8425  
Telex: 747276

## MAINTENANCE INSTRUCTIONS

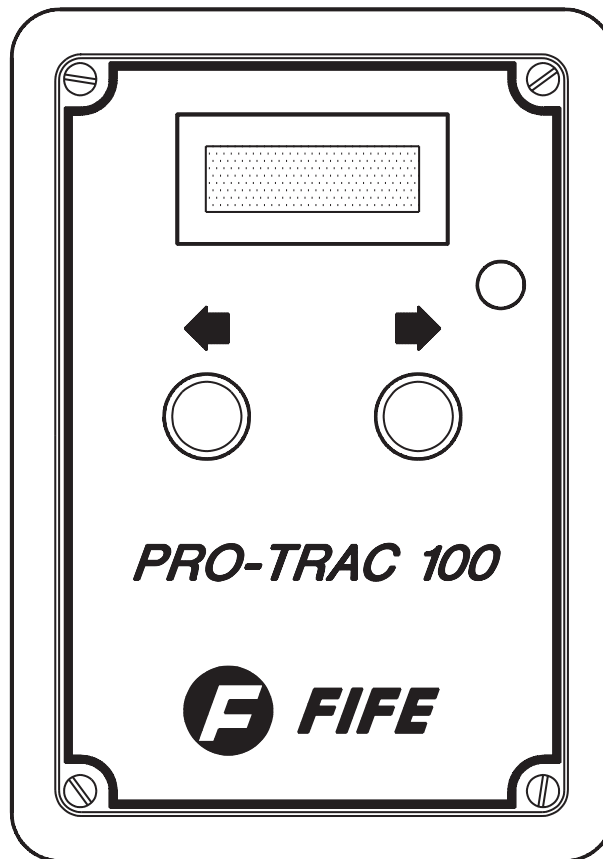

The Pro-Trac 100 control station has been designed to provide years of trouble free service. If maintenance should be required, refer to Fife Control Box Assembly Drawing No. D-80360.



**BEFORE PERFORMING ANY MAINTENANCE ON THE PRO-TRAC 100, DISCONNECT POWER FROM THE CONTROL BOX ASSEMBLY.**

### Controller Assembly

Remove the controller assembly from its mounting. Remove the two screws holding the assembly together. Note that the circuit board is attached to the enclosure top cover.

### NOTE

**Electrical maintenance should only be attempted by a qualified electrical technician.**

Refer to Drawings D-79726 and D-79723 for electrical circuit information. These drawings are available from Fife Corporation, Oklahoma City, Oklahoma, Engineering Department. Refer to technical specification for fuse requirements.

